



PROTECTOR LATCH INSTALLATION GUIDE

*** BEFORE YOU BEGIN, READ BELOW ***

PARTS LIST:

- Durable Heavy-duty Plastic Magnetic Latch Keeper
- Easy-Lock gate latch body assembly w/2-sets of Keys
- Screw Pack, Total of 11-screws
 - (1) set screw for securing Bottom Housing to Lower Bracket #2.
- Upper Mounting Bracket #1
- Lower Mounting Brackets #2
- Installation & maintenance instruction sheet

Swimming pool fences, gates and latches cannot be substituted for adult supervision. If using this latch on a swimming pool gate, consult all appropriate local authorities for safety requirements.

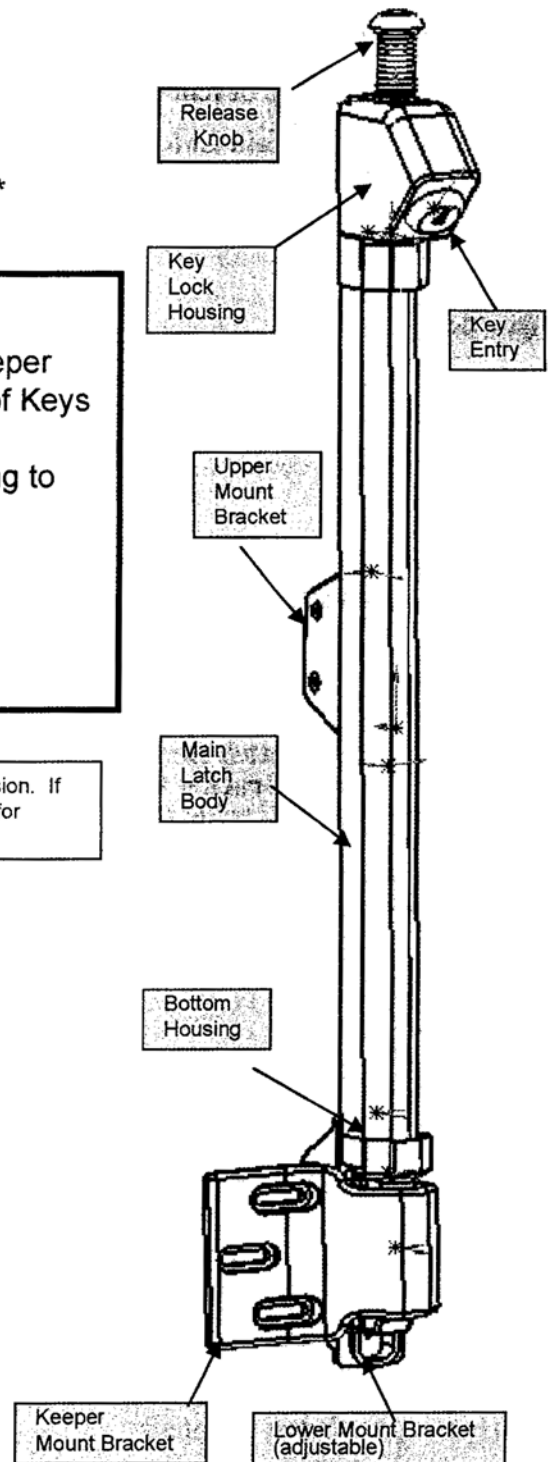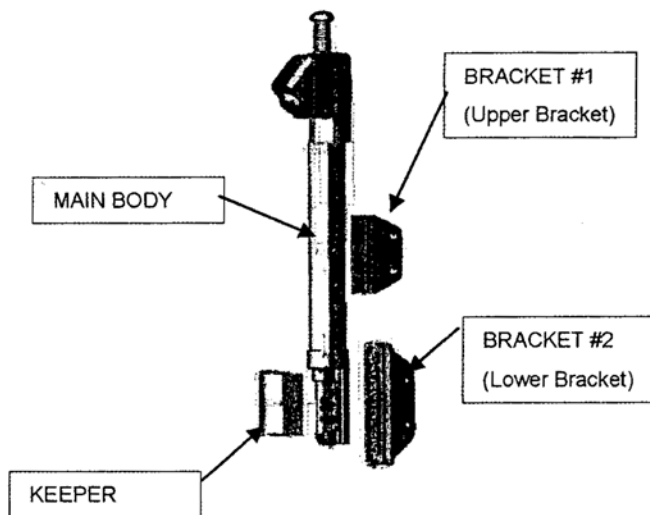

The Protector

Magnetic Gate Latch

STEP-1 Establish heights, spacing and proper location for bracket installations.

STEP-2 Install **Bracket #1** using 3 screws secure to fence post frame as shown in sketch. Attach near top of fence post.

STEP-3 Take **Main Latch Body** and position so that you can slide the rear grooves down onto installed Bracket #1. (Use a measuring tape to make sure you are within measurement requirements.) (see Detail-A.)

STEP-4 Hold Main Latch Body to maintain position as shown in **Detail -A**. Use a pencil to mark location of **Lower Bracket #2**. (HINT: place pencil mark in center hole of **Bottom Housing** to establish center location for **Lower Bracket #2** and location for **Keeper** to be installed on Gate.)

STEP-5 Attach and secure **Lower Bracket #2** to fence at center mark using (4) screws.

STEP-6 Now, slide **Main Latch Body** down onto **Upper Bracket #1** and down into **Lower Bracket #2**. Secure, by applying the set screw into **Bottom Housing** holes (use any that align) See Sketch-C.

STEP-7 With gate closed, position **Keeper** and align with Main Latch Body. Secure **Keeper** with (3) screws to Gate.

STEP-8 If any fine adjustments are needed, use Horizontal adjustment on **Keeper** and Vertical adjustment on **Bottom Housing** for better alignment.

